


BX2235 Installation Instructions 2004 Honda S2000

Serial No.

The front fascia and solenoid are removed for baseplate installation. Drilling is required. Trimming of air dam below metal bumper is required. The BX8869 is available for the vehicle. Attachment Tabs are 20 inches center to center and a height of 12 1/2 inches.

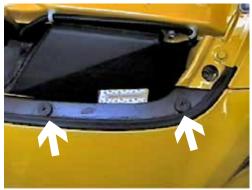

 Remove the five phillips screws from black plastic cover on top side of fascia with the phillips screw driver, lift cover and set aside.



3. Just forward and above of front tire is one metric bolt to remove from fascia's end with the 8MM socket, both sides.



5. Remove the three metric bolts and three push pins the middle of fascia's lower edge, using the 10MM socket, pull fascia forward and set aside.



2. Remove the black metric bolt from inside fender from opening at the ends of black plastic with the 10MM socket, both sides.



4. Forward of front tires on lower edge of front fascia are three metric bolts to remove with the 10MM socket, both sides.



6. Remove the two metric bolts from belly pan with 10MM socket and one push pin from the back middle edge and set belly pan aside.

Go RVing






7. Using the tape measure, mark 2 1/2" down from the bottom of frame on air dam (view of passenger's side).



- **9.** Remove two metric bolts from solenoid on driver's side with the 10MM socket and tie up out of the way.
- 11. Using the baseplate as a template, drill the four holes into the frame with the 13/32" drill bit, both sides. Insert nut plates into frame end to align with drilled holes inside frame, install 3/8-16 x 1 1/4" hex bolts and lock washers through baseplate into nut plates, tighten both sides. Be sure to use loctite on all bolts before tightening. Tighten all bolts according to Torque Chart in General Instruction Sheet.



8. Measure 2" from the back edge of air dam forward, cut upper forward section with the utility knife, remove push pin and discard cut piece, both sides.

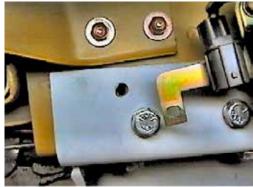

10. Align baseplate's upper front hole with existing front for solenoid on driver's side and clamp to frame with the vise grip. Note distance from frame end to baseplate front edge, apply same to the passenger's side and clamp to frame with vise grip.







- **12.** Reinstall solenoid using the two 6MM-1.0 x 16MM hex bolts to its original position with the 10MM socket on the driver's side.
- 13. Reinstall belly pan, fascia and upper black plastic cover.
- **14.** The dimensional variations between otherwise identical cars can be considerable. While the location and size of the holes in the baseplate were designed to allow for easy installation, it may be necessary to file a hole slightly to allow a bolt to clear.
- 15. Install the tow bar and safety cables according to the instructions included in their packages.
- **16.** Do **not** substitute other devices if the tow bar pin and clip are lost.
- 17. DEALER OR INSTALLER: BE CERTAIN THE USER RECEIVES THE INSTRUCTION SHEET.



Tools Required




8MM Socket Utility Knife Phillips Screw Driver 10MM Socket Loctite Vise Grips

9/16" Socket 13/32" Drill Bit

Parts List

ou ong as an oa			
Ref. No.	Qty.	Part No.	Description
1	1	61-6011	Weldment, Base Plate, BX2235
2	8	61-5208	3/8" Nut Plate, with Wire
3	8		
4	8	203-0010	3/8 Lock Washer, ZP
5	2	201-0461	6MM-1.0 x 16MM Hex Cap Bolt, Grd. 8.8, ZP
6	2	201-0979	#12-14 x 1" Self Drilling Screw, ZP
7	2	202-0047	#10-32 Hex Nut
8	2	203-0054	#10 Lock Washer
9	2	201-0192	#10-32 x 1/2 Slot, Rd. Hd. Screw
10	2		Adapter, 4 Way Connector
11	2	62-3468	Attachment, Assembly, SF/ SB (R)
	2	226-0046	Baseplate Safety Cable, 36" CL III (Not Shown)
	2	229-0359	Quicklink, 3/8, ZP (Not Shown)
	2	290-0437	Receiver, Cap Plug (BLK) (Not Shown)

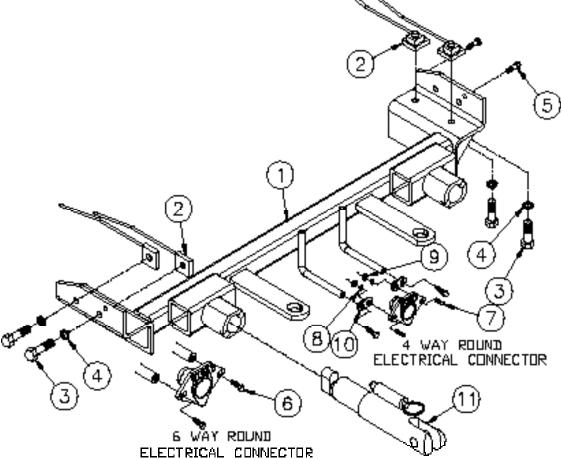

IMPORTANT: Use only genuine factory replacement parts on your Base Plate. Do not substitute homemade or nontypical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your Base Plate, be sure to use a replacement bolt of the same grade (Usually Grade 5, refer to parts list). Repair parts may be ordered through your nearest **Blue Ox** dealer or distributor.

© 2004 Blue Ox Division, Automatic Equipment Mfg. Co. • One Mill Road, Industrial Park Pender, Nebraska 68047 • Phone 402-385-3051 • Fax 402-385-3360 • www.blueox.us



General Information

- 1. Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/ or recalls.
- 2. It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip. Be sure to use Loctite® Red on all bolts and tighten to the recommended specifications.
- 3. It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/recommendations.
- 4. Remove the attachment tabs when not in use (if applicable).

Notice To Baseplate Installer

- 1. It is YOUR responsibility to watch for:
 - Oil cooler and air conditioner lines
 - Electrical wires and hoses
 - Missing parts or attaching points on the frame
 - ** If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.

Permanent Baseplate Safety Cable Installation

Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.

These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.

