

# FUSE BYPASS SWITCHES

Make & Model	Year(s)	Fuse Type	Part #	Notes	
<b>Acura</b>					
All towable	All	ATM	BX88272	See owner's manual for fuses to be removed	
<b>Buick</b>					
Enclave	2007-2008	50 amp fuse	BX88274	50 amp Batt1 fuse is removed from UBEC (underhood bussed electrical box)	See GM Service Doc 2870602
Enclave	2009 - 4/30/2012	(1)50 amp HD & (1)15 amp mini fuses	(1)BX88274 & (1)BX88271	50 amp Batt1 & 15 amp ECM fuses are removed from UBEC box.	See GM Service Doc 2870602
Enclave	5/1/2012 -12/31/12	(1)50 amp fuse & (2)15 amp mini fuses	(1)BX88274 & (2)BX88271	50 amp Batt1, 15 & 20 amp ECM fuses are removed from UBEC box in a specific sequence please refer to your owner's manual	See GM Service Doc 2870602
Enclave	2013-2017	(1)50 amp fuse & (2)15 amp ATC/ATO fuses	(1)BX88274 & (1) BX88294	50 amp Batt1 for UBEC box. 15 amp ECM & 15 amp OnStar fuse to be removed from battery compartment under floor behind front passenger seat	
Envision	2016-2020	ATM	BX88273	Remove Fuses 29 & 32 (Body Control Modules 1 & 2) Mount on Fuse Panel Cover inside Glovebox	
<b>Cadillac</b>					
SRX	2010-2011	(3)15 amp	(1)BX88272 & (1)BX88273	BCM1, 2 & 3 fuses must be removed	
<b>Chevrolet</b>					
Captiva	2012-2013	ATM	BX88271	#32 DLIS Fuse or F14 POW MODING fuse	
Captiva Sport	2014	ATM	BX88271	F14 POW MODING fuse	
Cobalt	2006-2010	ATM	BX88271	See owner's manual for fuses to be removed	
Cruze	2011	ATM	BX88271	Ignition sensor	
Cruze	2012 (some)	ATM	(2)BX88273	Remove fuse #22, #23, #24 & #25	
Cruze	2013	ATM	BX88271	Ignition sensor	
Cruze (Manual Transmission)	2014-2016	ATM	(1) BX88271 & (1) BX88273	Fuse #25 is not used, therefore, (1) single & (1) double circuit Fuse ByPass Switch is recommended	
Cruze (Manual Transmission)	2017-2018	ATM	(1) BX88271 & (1) BX88273	Remove Fuse # 15,23,26 & 27 Fuse 27 is not used, thus 1-single & 1-double circuit Fuse ByPass is recommendation	
Equinox	2008	ATM	BX88272	Certain 15 amp applications	
Equinox V6 Engine	2010-2017	5 amp ATM	BX88271	#32 DLIS fuse	
Equinox 4 cyl (LAF LEA)	2010	20 Amp FMX	BX88274	#15 ABS Module Fuse in Underhood Fusebox	
Equinox 4 cyl (LAF LEA)	2011-2017	20 Amp FMX	BX88274	#16 ABS Module Fuse in Underhood Fusebox	
HHR	2006-2011	ATM	BX88271	Ignition sensor	
Malibu	2001-2003	(2)ATM	BX88273	Leave 25 amp fuse in (wipers). Use for (2) 10 amp fuses	
Malibu	2006-2012	ATM	BX88272	Ignition sensor	
Malibu	2014-2015	ATM	(1) BX88273 & (1) BX88271 (Key Ign Only)	Fuses (#8, #22, #24) - Keyed Ignition Push Button Ignition	Fuses (#8, #24) -
Malibu	2016-2018	ATM	BX88273	Fuses (#10, #41)	
Orlando	2014	ATM	(2) BX88273	Remove fuse #21, #22, #23 & #24	
Pickup	2000-2011	ATM	BX88272	See owner's manual for fuses to be removed	
Sonic	2012-2017	ATM	BX88271	#1 DLIS Fuse	
Sonic	2018-2020 (Keyed Ignition)	ATM	BX88271	#1 DLIS Fuse	
Sonic	2018-2020 (Keyless Ignition)	ATM	(1) BX88273 & (1) BX88271	Remove BCM1 & BCM2 with 1-double circuit RVing FuseSwitch™ in passenger compartment fusebox and F07 from Engine Compartment fusebox using 1-single Circuit Short lead Fuse ByPass recommendation ***	
Spark (No EV)	2013-2015	ATM	BX88271	#1 DLIS Fuse	
Tracker	2003	ATM	BX88272	10 amp fuse	
Trailblazer	all towable	ATM	BX88272	See owner's manual for fuses to be removed	
Traverse	2007-2008	50 amp fuse	BX88274	50 amp Batt1 fuse is removed from UBEC box.	See GM Service Doc 2870602
Traverse	2009 - 4/30/2012	(1)50 amp HD & (1)15 amp mini	(1)BX88274 & (1)BX88271	50 amp Batt1 & 15 amp fuses are removed from UBEC box.	See GM Service Doc 2870602
Traverse	5/1/2012 & newer 2012	50 amp HD & (2) 15 amp mini	(1)BX88274 & (2)BX88271	50 amp Batt1, 15 amp ECM & 20 amp ECM1 fuse to be removed in specific sequence from UBEC box.	See GM Service Doc 2870602
Traverse	2013-2017	(1)50 amp fuse & (2)15 amp ATC/ATO fuses	(1)BX88274 & (1) BX88294	50 amp Batt1 from UBEC box. 15 amp ECM & 15 amp OnStar fuse to be removed frm battery compartment under floor behind front passenger seat	
Traverse	2019	(1)40 Amp FMX & (1)10 Amp MicroMini ATM	(1)BX88274 & (1) BX88271	F3, the DC DC Transformer 1 fuse & F59 Engine Control Module battery fuse from Engine Compartment Fuse Box	
<b>Dodge</b>					
Dakota 4x4	2005	ATM-10 amp Underhood	BX88271	Mount on top of fuse box cover	
<b>Ford</b>					
Edge / Flex	Thu 2012	ATM-20 amp	BX88272	Main ignition fuse	

Escape/Mariner	All	ATM-20 amp	BX88272	Main ignition fuse	
Explorer	2007-2011	ATM-15 amp	BX88272	See owner's manual for fuses to be removed	
Fusion	All towable	3 fuses	(1)BX88272 & (1)BX88273	See owner's manual for fuses to be removed	Eliminates need to start & run car after towing
<b>GMC</b>					
Acadia	2007-2008	50 amp FMX	BX88274	50 amp Batt1 fuse is removed from UBEC box.	See GM Service Doc 2870602
Acadia	2009 - 4/30/2012	(1)50 amp FMX & (1)15 amp ATM	(1)BX88274 & (1)BX88271	50 amp Batt1 & 15 amp ECM fuses are removed from UBEC box.	See GM Service Doc 2870602
Acadia	5/1/2012 & newer 2012	(1)50 amp HD & (2)15 amp ATM	(1)BX88274 & (2)BX88271	50 amp Batt1, 15 amp ECM & 20 amp ECM1 fuses are removed in specific sequence from UBEC box.	See GM Service Doc 2870602
Acadia	2013-2016	(1)50 amp HD fuse & (2)15 amp ATC/ATO fuses	(1)BX88274 & (1) BX88294	50 amp Batt1 from UBEC box. 15 amp ECM & 15 amp OnStar fuse to be removed from battery compartment under floor behind front passenger seat	See GM Service Doc 2870602
Acadia Limited Only	2017	(1)50 amp HD fuse & (2)15 amp ATC/ATO fuses	(1)BX88274 & (1) BX88294	50 amp Batt1 from UBEC box. 15 amp ECM & 15 amp OnStar fuse to be removed from battery compartment under floor behind front passenger seat	See GM Service Doc 2870602
Safari	2003	10 amp ATM	BX88272	See owner's manual for fuses to be removed	
Terrain V6 Engine	2010-2017	5 amp ATM	BX88271	#32 DLIS fuse	
Terrain 4 cyl (LAF LEA)	2010	20 Amp FMX	BX88274	#15 ABS Module Fuse in Underhood Fusebox	
Terrain 4 cyl (LAF LEA)	2011-2017	20 Amp FMX	BX88274	#16 ABS Module Fuse in Underhood Fusebox	
<b>Honda</b>					
CRV	1996-2006	ATM	BX88272	See owner's manual for fuses to be removed	
CRV	Most 2007-2014	Micro ATM	BX88272	Remove #19 7.5 amp ACC (radio) fuse. Customer to supply 7.5A ATM fuse to fit fuseholder in switch harness	
CRV	Some 2012-2014	Micro ATM	BX88273	Remove #19 7.5 amp ACC (radio) and #20 7.5 amp ACC keylock (batt) fuses. Customer to supply (2) of 7.5A ATM fuses to fit fuseholders in switch harness	
Fit	2009-2014	Micro ATM	BX88272	Customer to supply 20 amp fuse to replace the existing 30 amp fuse in car to fit fuseholder in switch harness	
Fit	2015-2016	Micro ATM	(1) BX88273 & (1) BX88271	Without Smart Entry: Use BX88273 for interior fuses and BX88271 for underhood fuse. Mount switches on fuse box covers.	
HRV (Manual Transmission)	2017	Micro ATM	(1) BX88273 & (1) BX88271	Remove 20 Amp & 7.5 Amp Accessory fuses from Interior fusebox and 10A Back up Fuse from Engine Compartment fuse box	
Pilot	2009-2012	Micro ATM	BX88272	Customer to supply fuse to match rating of fuse in car to fit fuseholder in switch harness	
<b>Jeep</b>					
Cherokee	2014-2019	10 Amp ATM (w/ MOPAR Power Steering Recall Kit Installed)	BX88271	In area of Underhood Fusebox	
Wrangler	1997	ATM	BX88272	10 amp, tight fuse panel located behind glovebox	
<b>Lexus</b>					
RX350	2009	ATM	BX88272	See owner's manual for fuses to be removed	
<b>Oldsmobile</b>					
Alero	2001-2003	(2) ATM	(2)BX88273	Leave 25 amp fuse in (wipers). Use for (2) 10 amp fuses	
<b>Pontiac</b>					
G6	2003-2006	30 amp FMX	BX88274	BCM	
G6	2005	2 amp ATM	BX88272	See owner's manual for fuses to be removed	
G6	2007-2011	ATM	BX88272	See owner's manual for fuses to be removed	
<b>Saturn</b>					
Aura	2007-2009	ATM	BX88272	See owner's manual for fuses to be removed	
Outlook	All	50 amp square	BX88274	Under hood fuse panel	
Vue	2003-2004	ATM	BX88272	See owner's manual for fuses to be removed (NO 30 Amp Maxi Fuse)	
Vue	2008-2009	ATM	BX88271	See owner's manual for fuses to be removed	
<b>Subaru</b>					
Legacy GT Spec B	2008	ATM-15 amp	BX88272	Passenger compartment	

\*Always consult the owner's manual or the manufacturer's dealer service department of the towed vehicle to confirm which fuse(s) must be removed for towing.