


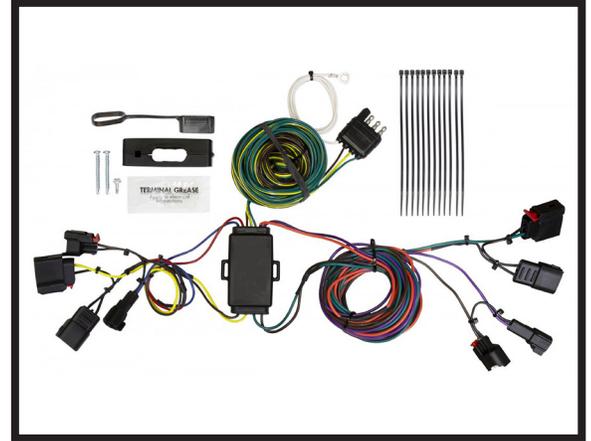

BX88406

EZ Light Wiring Harness Installation Instructions

1. Open tailgate, remove the vehicle's taillight assemblies from both the driver's and passenger's side by removing the two clips holding them in place. Being careful not to break the alignment tabs, disconnect the taillight housing from the vehicle.
2. Mount converter box on driver's side behind the driver's side taillight, using the double stick tape provided.
3. Disconnect the vehicle wiring harness from both taillight sockets. Plug the wiring kit connector with the yellow wire into the mating connectors on the driver's side taillight socket and vehicle wiring harness.
4. Starting on the driver side of the vehicle, route the wiring kit connector with the green wire down through the opening between the vehicle frame and body to the passenger's side avoiding the exhaust and areas that would cut or pinch the wire. Route the wiring kit connector with the green wire up through the opening on the passenger's side between the frame and body.
5. Plug the wiring kit connector with the green wire into the mating connector on the passenger's side taillight socket and vehicle wiring harness.
6. Secure all loose wiring behind taillight assembly with the provided nylon zip ties.
7. Route the 4-Flat harness out of the lower rear driver's side to front of vehicle. Secure wire to vehicle with nylon zip ties.
8. Reinstall the taillight housing assembly, positioning the wire harness between the housing and the vehicle body. Secure the remainder of the wiring kit harness under the bumper, or behind the taillight housing, with nylon zip ties. Be careful to avoid any areas that would cut or pinch the wire.
9. Install 4-Flat end of harness (from rear of vehicle) into the 4-Flat bracket.
10. Mount the 4-Flat bracket using screws provided in a convenient location at the front of the vehicle.
11. Locate a suitable grounding point near the connector. (Do not drill into vehicle floor or bed.) Clean dirt, paint and rust proofing from area. Drill a 3/32" hole and secure white wire with ring terminal using screw provided. Do not drill into any exposed surfaces.
12. Apply a small amount of grease (provided) to the 4-Flat terminals to prevent corrosion.
13. Connect to RV electrical system and test all functions with the engine running to ensure proper operation.



Tip: Grease applied to the wiring terminals on a regular basis will help prevent corrosion.

BX88406
EZ Light Wiring Harness
Installation Instructions

CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our customer care team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.



© 2015 Blue Ox
One Mill Road, Industrial Park
Pender, Nebraska 68047
Phone: (402) 385-3051
Fax: (402) 385-3360
www.blueox.com