




## BX88384 & BX88400 Rubber Boot Replacement Instructions




1. Using a 1/2" socket, remove the one (1) bolt attaching the lug to the leg assembly. Set the lug aside.



2. Remove the zip ties securing the boot to the leg assembly. Remove the old boot.

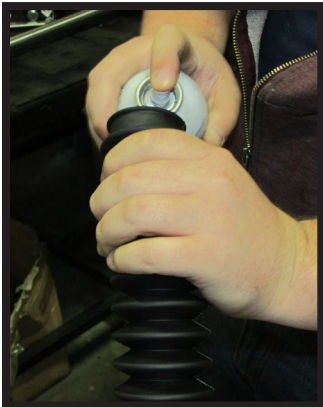

3. Coat the inside of the new boot with silicone spray, clean and re-grease the leg assembly, and install the new boot.

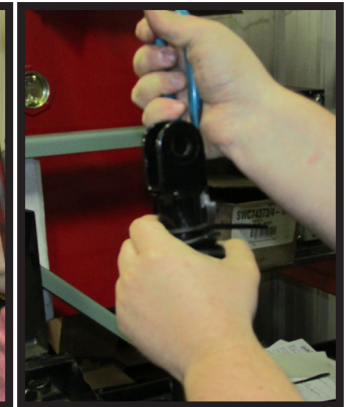

4. Install the new zip ties onto the boot, ensuring the larger of the two secures the bottom with the smaller on top.



5. Reinstall the lug to the leg assembly.