



BX88357

Aftermarket Off Road Bumper Adapter 7/8" Pin, 15,000 lb. Tow Rated Installation Instructions

Serial Number




Note: Recommended for use with aftermarket bumpers that have a tab thickness of 5/8" - 1".


Minimum Tab Hole Diameter: 0.871"

Maximum Tab Hole Diameter: 0.934"

When using a Blue Ox adapter to flat tow a vehicle by the aftermarket bumper, it is the customer's responsibility to contact the bumper manufacturer and verify that the vehicle can be towed by the aftermarket bumper.

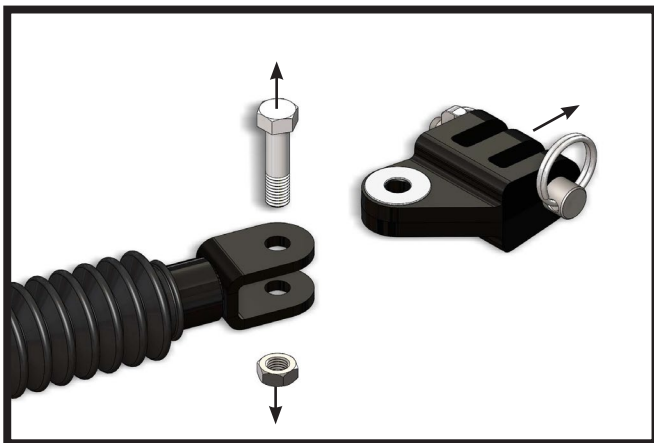

1. Using a 3/4" socket and wrench, remove the existing 1/2"-13 bolt and 1/2"-13 jam nut from the tow bar leg. Remove the existing lug and washers from the tow bar leg. Do this on both tow bar legs.

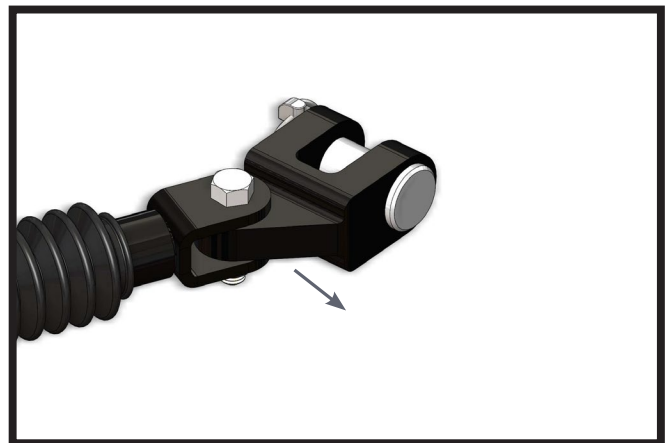

2. Install the offset double lug onto the tow bar leg with the new washers, 1/2"-13 x 2" bolt and 1/2"-13 jam nut provided. Tighten the bolt until the lug is tight against the washers, but can still freely move side to side. Do this on both tow bar legs.

Note: When installing the adaptor, ensure the offset is towards the outside of the tow bar (gray arrow above).

BX88357



Item No.	Part No.	Description	Qty.
1.....	102-7543.....	7/8" Offset Double Lug	2
2.....	107-3619.....	1/8" Bushing	6
3.....	201-0645.....	1/2"-13 x 2" Hex Head Bolt, Short Thread	2
4.....	202-0143.....	1/2"-13 Essna Jam Nut, ZP	2
5.....	229-0829.....	3/16" x 1-1/4" Linch Pin	2
6.....	229-0937.....	7/8" Dia x 2-11/16" Eff. Pin, ZP	2
7.....	290-0381.....	Washer, .523 ID x 1.363 OD.....	4

CUSTOMER SERVICE COMMITMENT

© 2024 Blue Ox
One Mill Road, Industrial Park
Pender, Nebraska 68047
Phone: (402) 385-3051
Fax: (402) 385-3360
www.blueox.com