



BX3811 Installation Instructions Volkswagon Fox

INSTALLATION

1. The tow bar assembly consists of a permanently mounted baseplate and a detachable tow bar.
2. The baseplate mounts to the front underside of the car using four bolts; two on each side.
3. Located just inboard and forward of the sway bar brackets are two engine mounts. Remove the nut and washer from the bottom of each mount. Inspect the nuts for reuse, the washers will not be reused (see special note).
4. Position the baseplate on the car such that the tie down brackets are behind the outermost set of wire tie down loops which protrude from the front of the air dam. The wire loops must rest in the rounded recess of each bracket.
5. The dimensional variations between otherwise identical cars can be considerable. While the location and size of the holes in the baseplate were designed to facilitate each installation, it may be necessary to file a hole slightly to allow a bolt to clear.
6. Place a tie down clamp over the end of each 1/2-13 x 2" bolt and hand start the bolt through the top of the wire loop and through tie down bracket. Loosely secure with a lock washer and nut. Use Locktite on all bolts, but do not tighten yet.
7. The two arms attach to the motor mount studs and to the baseplate. The longer of the two arms fits on the passenger side of the car.
8. Place the capped end of the arm tubes over each motor mount stud and loosely secure with the previously removed nuts.
9. Assemble the arms to the baseplate using the 1/2-13 x 1 1/2" bolts and lock washers.
10. When all bolts align, tighten securely.
11. With all bolts properly installed (see special notice), you are ready to install the tow bar. Hold the tow bar in position with the tabs aligned inside the tabs of the baseplate and insert the pins. Slide the hairpin clips through the holes in the pins. Install a safety cable or chain and adjust the coupler.
12. Do not substitute other devices if the pin and clip are lost.
13. DEALER OR INSTALLER: BE CERTAIN THE USER RECEIVES THE INSTRUCTION SHEET.


Tools Required

17MM SOCKET
SOCKET EXTENSION

3/4" SOCKET

3/4" END WRENCH

Automatic

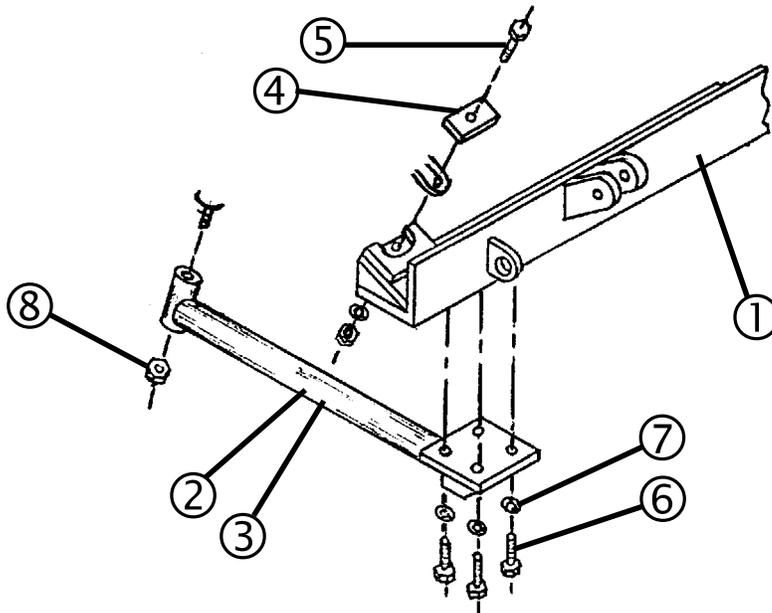

⑨
NOT SHOWN

PARTS LIST

Ref No.	Qty	Part No.	Description
1	1	61-3527	Baseplate, BX3811
2	1	61-3520	Driver's Side Arm
3	1	61-3528	Passenger's Side Arm
4	2	102-3053	Tie Down Clamps
5	2	201-0283	1/2"-13 X 2" Bolts
6	8	201-0051	1/2"-13 X 1-1/2" Bolts
7	10	203-0012	1/2" Lock Washer
8	2	202-0005	1/2"-13 Nuts